

MEXM-2 I/O Modbus addresses

ADDRESS	DESCRIPTION	ATTRIBUTE
10001	Status input #1	Read only
10002	Status input #2	Read only
10003	Status input #3	Read only
10004	Status input #4	Read only
10005	Status input #5	Read only
10006	Status input #6	Read only
10007	Status input #7	Read only
10008	Status input #8	Read only
10009	Status input #9	Read only
10010	Status input #10	Read only
10011	Status input #11	Read only
10012	Status input #12	Read only
10013	Status input #13	Read only
10014	Status input #14	Read only
10015	Status input #15	Read only
10016	Status input #16	Read only
10017	Status input #17	Read only
10018	Status input #18	Read only
10019	Status input #19	Read only
10020	Status input #20	Read only
10021	Status input #21	Read only
10022	Status input #22	Read only
10023	Status input #23	Read only
10024	Status input #24	Read only
10025	Status input #25	Read only
10026	Status input #26	Read only
10027	Status input #27	Read only
10028	Status input #28	Read only
10029	Status input #29	Read only
10030	Status input #30	Read only
10031	Status input #31	Read only
10032	Status input #32	Read only
10033	Status input #33	Read only
10034	Status input #34	Read only
10035	Status input #35	Read only
10036	Status input #36	Read only
10037	Status input #37	Read only
10038	Status input #38	Read only
10039	Status input #39	Read only
10040	Status input #40	Read only
10041	Status input #41	Read only
10042	Status input #42	Read only
10043	Status input #43	Read only
10044	Status input #44	Read only
10045	Status input #45	Read only
10046	Status input #46	Read only
10047	Status input #47	Read only
10048	Status input #48	Read only
10049	Status input #49	Read only
10050	Status input #50	Read only
10051	Status input #51	Read only
10052	Status input #52	Read only
10052	Status input #53	Read only
10054	Status input #54	Read only
10055	Status input #55	Read only
10056	Status input #56	Read only
10057	Status input #57	Read only
10058	Status input #58	Read only
10059	Status input #59	Read only
10060	Status input #60	Read only
10061	Status input #61	Read only
10062	Status input #62	Read only
10063	Status input #63	Read only
10064	Status input #64	Read only